

DEPLOYANT BUCKLE INSTRUCTIONS

1. PULL BACK ON THE BUCKLE CLASP TO OPEN THE BUCKLE.

2. PULL BACK ON HINGED POST TO RELEASE THE POST FROM THE STRAP HOLE.

3. SLIDE STRAP TO ALIGN HINGED POST WITH THE APPROPRIATE HOLE FOR WRIST SIZE.

4. PUSH DOWN ON HINGED POST UNTIL THE POST IS FULLY INSERTED INTO THE STRAP HOLE.

Freelook
PARIS

CUSTOMER SERVICE

213.629.3959

